


**DTC**  
Global Quality Benchmark



NL(mm)	250	270	300	350	400	450
Y(mm)	25				35	





- 
- The diagram shows a 3D perspective of a square cabinet. The top surface is shaded gray. The front and side panels are white. Dashed lines indicate internal dimensions and structural elements. A vertical dimension line on the right side is labeled '176'. A horizontal dimension line at the bottom is labeled 'LT'. Below the diagram, there are two columns of text defining the variables used.
- |   |   |
|---|---|
| <p>Slides(option1)<br/>Standard drawer: <math>LT=NL+3</math><br/>Inner drawer: <math>LT=NL+21</math></p> <p>Slides(option2)<br/>Standard drawer: <math>LT=NL-10+Y+3</math><br/>Inner drawer: <math>LT=NL-10+Y+21</math></p> | <p> <math>NL</math> = Nominal Slide Length<br/> <math>LT</math> = Internal Cabinet Depth         </p> |
|---|---|

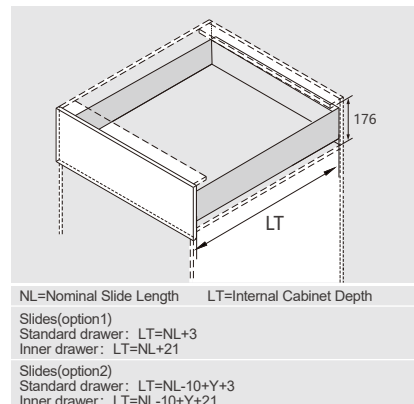


1 боковина ящика

Белый шелк (E29)! Серый матт (E30)		
NL	Item No.	Set/ctn
250mm	HLG13250X	10
270mm	HLG13270X	10
300mm	HL13300X	10
350mm	HL13350X	10
400mm	HL13400X	10
450mm	HL13450X	10
500mm	HL13500X	10
550mm	HL13550X	10




NL	 Soft Close Item No.	Set/ctn
250mm	<b>GG10250H</b>	10
270mm	<b>GG10270H</b>	10
300mm	<b>GG10300H</b>	10
350mm	<b>GG10350H</b>	10
400mm	<b>GG10400H</b>	10
450mm	<b>GG10450H</b>	10
500mm	<b>GG10500H</b>	10
550mm	<b>GG10550H</b>	10



NL	 Soft Close item No.	Set/ctn
250mm	<b>GG10250H1</b>	10
270mm	<b>GG10270H1</b>	10
300mm	<b>GG10300H1</b>	10
350mm	<b>GG10350H1</b>	10
400mm	<b>GG10400H1</b>	10
450mm	<b>GG10450H1</b>	10



Арт.	0HLJS02
компл./кор.	200

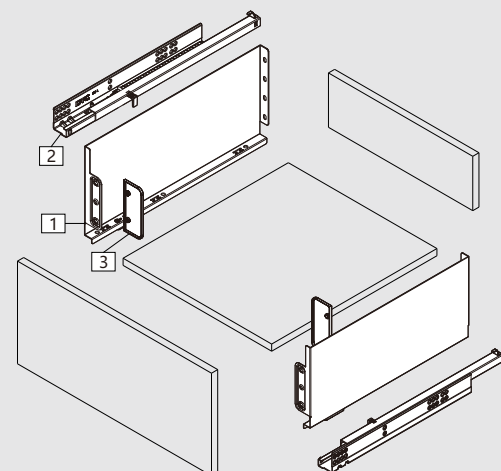

Заглушки на включены в комплект

**Стандартный ящик**

**Внутрен. ящик**

Край корпуса

Длина	Диаметр	Расстояние между центрами	Расстояние от края
1000	100	96	37
900	100	96	37
800	100	96	37
700	100	96	37
600	100	96	37
500	100	96	37
400	100	96	37
300	100	96	37
200	100	96	37
100	100	96	37

НЛ

250

270

300

350

400

450

500

550

37 96 32 32 9 14 64

128 224 64

Край корпуса

37 2-ое отверстие

[illegible]

Край корпуса

9 9 9 9

96 32 32 9

128 64

224

37

4-ое отверстие

NL

250

270


300

350


400

450



KB	ширина корпуса	(1)	KB	ширина корпуса	(2)
LW	внутренняя ширина корпуса		LW	внутренняя ширина корпуса	
NL	длина направляющего		NL	длина направляющего	

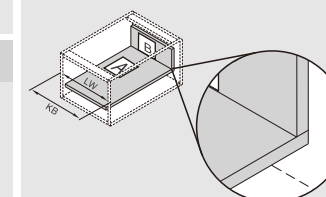

T1= толщина дна Рекомендуемая  
толщина задней стенки и дна  
ящика: 14mm/16mm/18mm

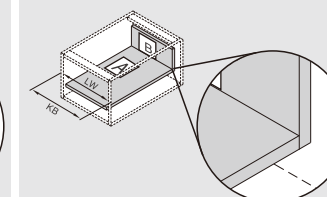

T2= толщина задней стенки  
Рекомендуемая толщина дна  
ящика: 12mm/16mm/18mm

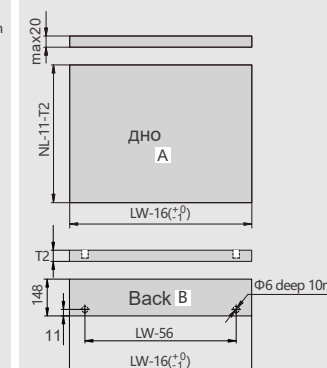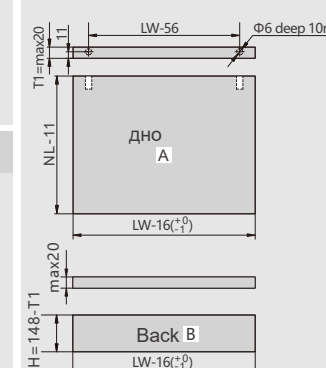


# МОНТАЖ И РЕГУЛИРОВКА


Установка и регулировка ящиков Pure Box




## Сборка

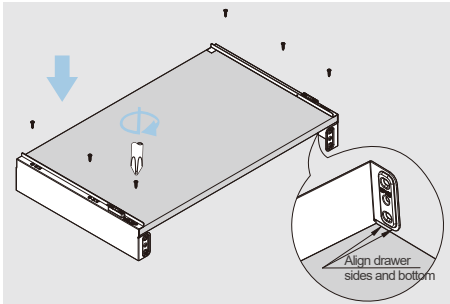


Выровняйте боковины и дно ящика, зафиксируйте винты и соберите дно.

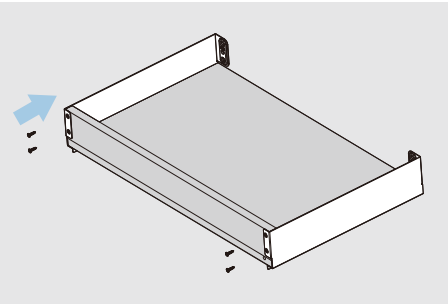


Сборка задней стенки

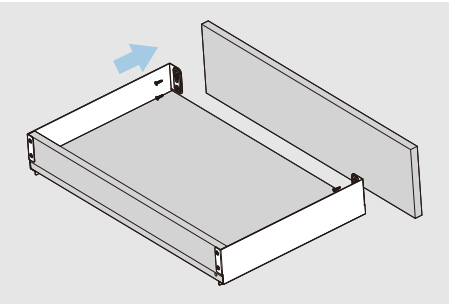


Сборка передней панели.

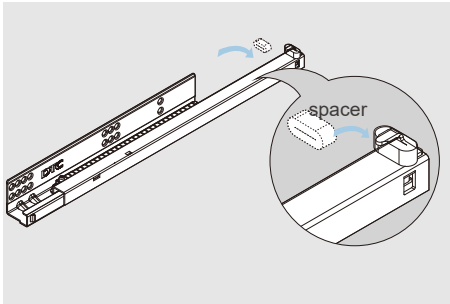




Установите проставку на задний крючок направляющей

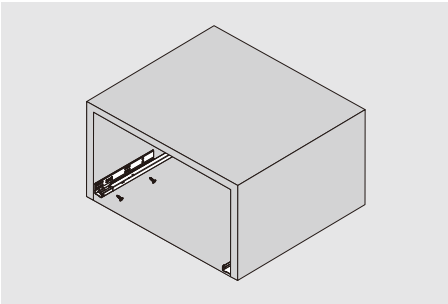


Закрепите направляющие на корпус

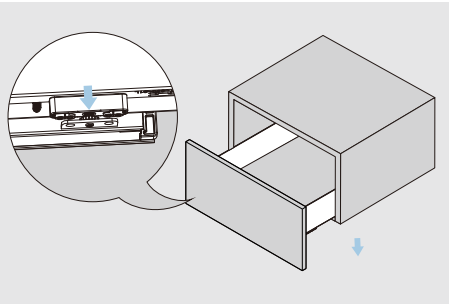


Установите ящик на направляющую

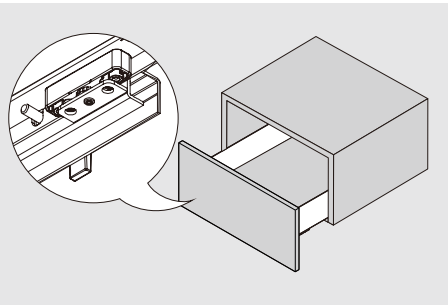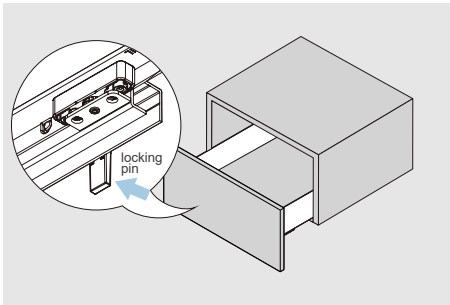

## Регулировка

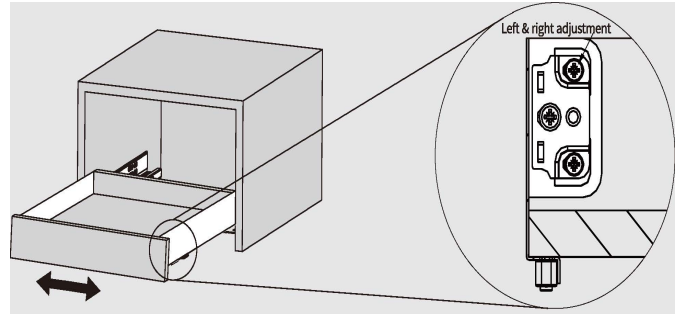


Регулировка вправо/влево

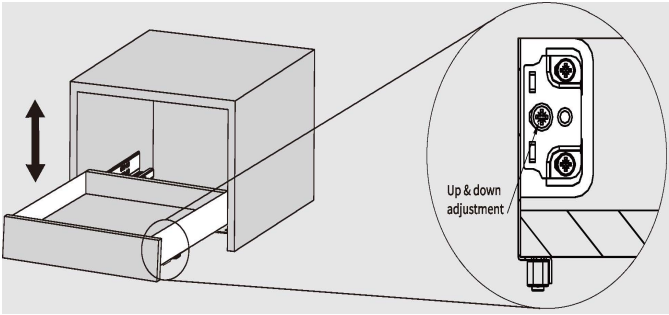


Регулировка вверх/вниз

## Демонтаж

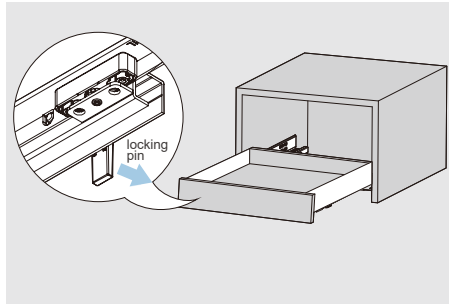

снимите направляющие с замка

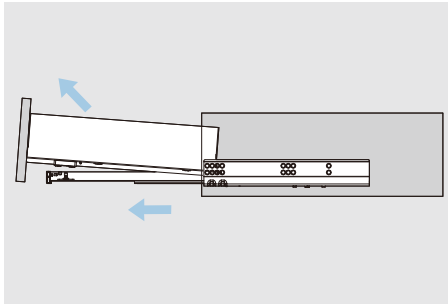

Поднимите ящик и выдвиньте его из корпуса

